




Portable air conditioner unit – KY32 Operating Instructions

Also called – Room air conditioner, mobile cooler

Put the mobile air conditioner in an open place where the air outlets cannot be covered up. Place the unit no less than 50cm away from a wall or other obstacles.

A standard 13amp plug fitted with 13 amp fuse must be used and ensure the unit is connected to an earthed 220-240V 50Hz supply. Do not use an extension lead with this product. If the plug or power cord become damaged consult a qualified electrician

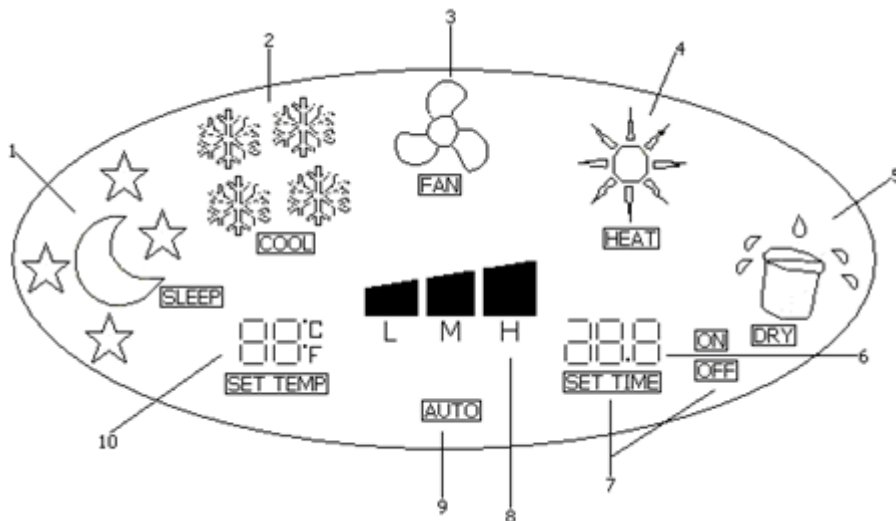


LCD Display Window

1. Sleep mode
2. Cool mode
3. Fan mode
4. Heat mode
5. Dry mode
6. Timer display
7. Timer on / off
8. Fan speed
9. Auto mode
10. Setting temperature mode

Control Panel

1. Power on / off button
2. Mode button
3. Fan speed
4. LCD window
5. Temp button
6. Timer button
7. Sleep button

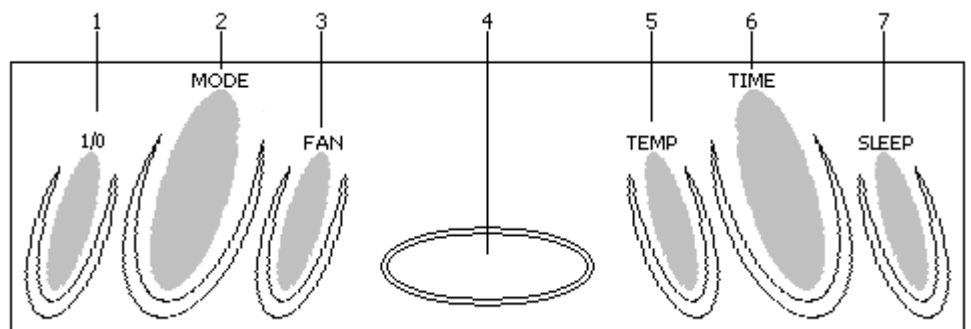


Selecting Air Conditioning Functions

1. **Turn the air conditioner on** – Press the on/off button '1/0'.
2. **Mode button** – The different running mode selections, five functions that you can choose from are: FAN → COOLING → DEHUMIDIFYING → HEATING → AUTO.
3. **Fan speed setting** – There are three speeds that you can choose from when the unit is working in fan mode, cooling mode or heating mode. Push the fan button to change the fan speed, the sequence is from High → Medium → Low.
4. **Temperature setting button 'Temp'** – As soon as the room air conditioner is switched on, in the cooling or heating mode, the display on the control panel will show the temperature set (this will usually be different from the actual room temperature). Use the up and down keys to either increase or decrease the temperature. To prevent unnecessary strain on the internal components, ideally select the temperature before selecting the operational mode
5. **Use the time button to programme the air conditioner** – Use the up and down buttons to increase and decrease the length of time you wish the unit to run for.

6. **Sleep button** – When the unit is running press the sleep button to enter the sleeping mode, and press once more to quit the mode. This key does not function under the Auto mode.

Operation of the room air conditioner

 
Cooling Operation

- Ensure that the drain tank is correctly placed in the unit
- Install the exhaust hose to the back of the unit and always place the hose through an open window in order to extract the warm air from the room while the unit is in operation
- Press the mode button until  appears on the LCD display
- Use the up and down buttons on the temp to select the temperature that you wish the unit to run at
- Press the up and down buttons on the fan to select the speed of the fan

Note:

In order to improve the cooling efficiency be careful that the room is not directly exposed to sun, if possible draw the blinds when necessary. Do not place the unit near another heat source.

Dehumidifying Operation

- Keep the windows and the doors closed to aid in dehumidifying the room
- Ensure that the drain tank is correctly placed in the unit
- Press the mode button until  appears on the LCD display. The fan speed can not be adjusted while using this function
- When using the dehumidifier only, do not use the exhaust hose

Fan Running

- Press the mode button until  appears on the LCD display.
- Press the up and down button on the fan to select the speed

Heating Operation (if applicable)

- Press the mode button until  appears on the LCD display
- Press the up and down button in the fan to select the speed

Note:

In this case only the PCT is working. The compressor and the fans motor will stop working.

Water Drainage

When in cooling or dehumidifying mode the moisture drawn from ambient air will drain into the tank. When the tank is full the indicator will flash and a buzzer will sound eight times. The LCD display will show an error code 'E4' at the same time and the compressor will stop running. The fan will continue to run at the set speed, and after 3 minutes the unit will switch off. Take out the water tank and empty then replace in the correct position.

Caution

1. When in cooling or dehumidifying mode, do not take out the water tank unless the unit has stopped running and the E4 code is displayed on the LCD display. Otherwise the buzzer will sound and the compressor will stop working and the unit will run in fan mode
2. If you wish to take out the water tank before it is full, then switch the unit off and wait for 3 minutes before taking out the water tank
3. There is a plastic pipe inside where the tank is placed. Do not remove the stopper while the unit is running as this is used to cool the copper tube

**London Cool air conditioner and heater rental & Sales
0800 440 444**

This document has been compiled in good faith, but no representation is made or warranty given (either express or implied) as to the completeness or accuracy of this information